


COMMERCIAL ANGLE MOUNT

HIGH LIFT STANDARD

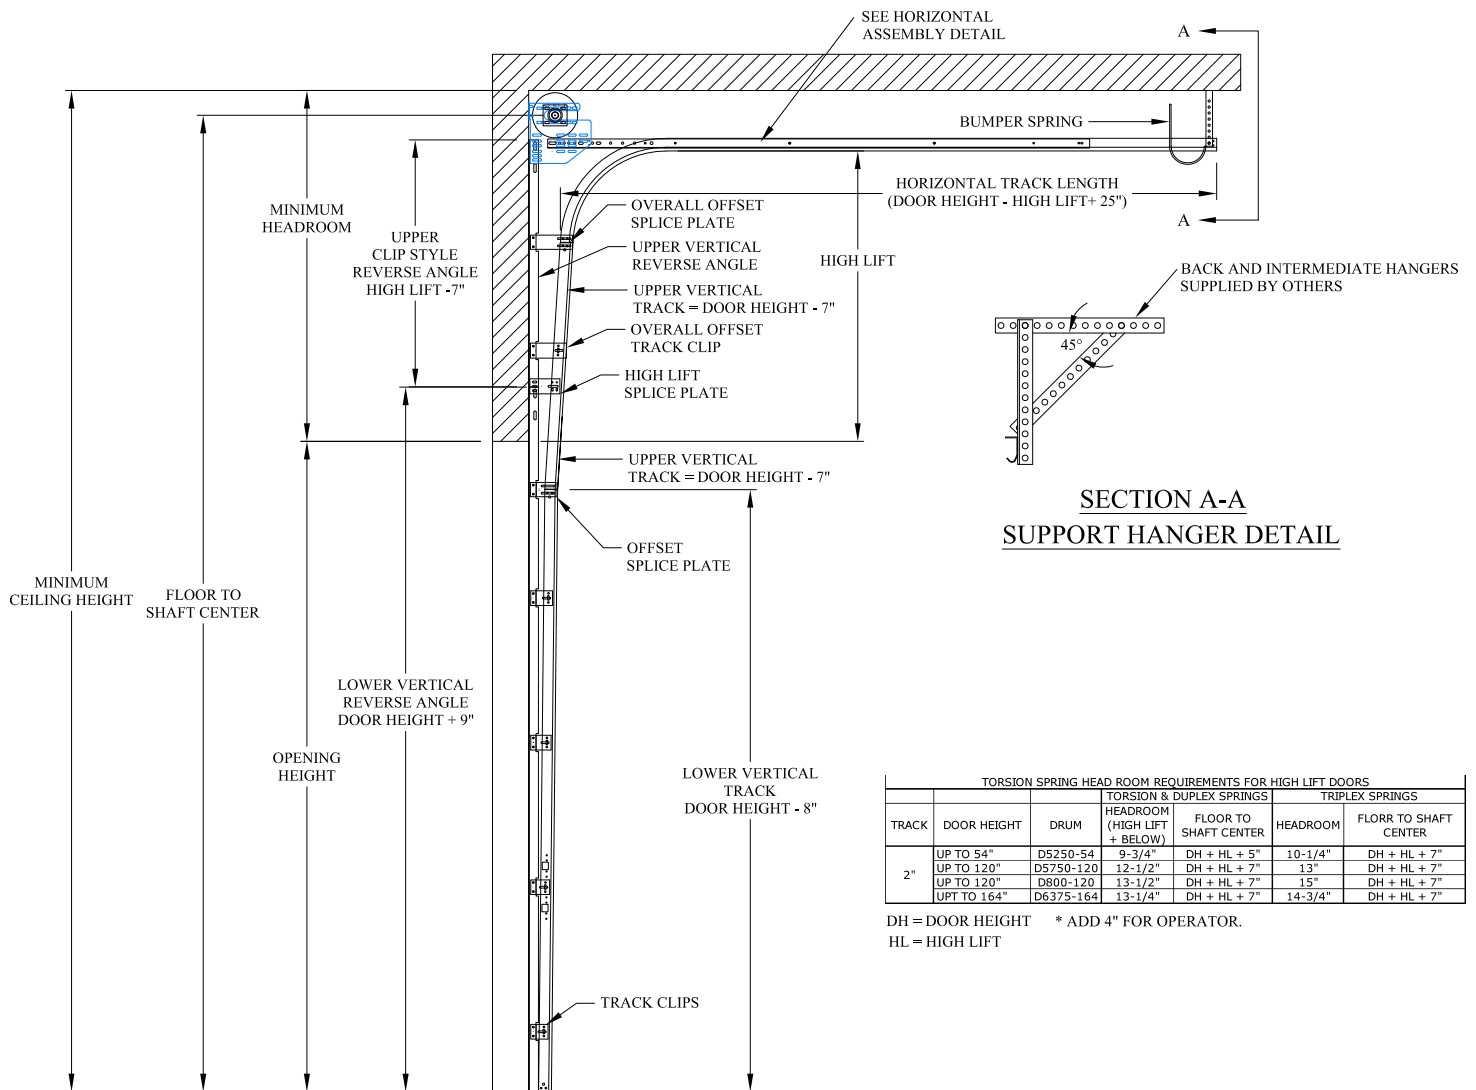


HIGH LIFT STANDARD ANGLE MOUNT TRACK SET DETAIL

TORSION SPRING HEAD ROOM REQUIREMENTS FOR HIGH LIFT DOORS						
TRACK	DOOR HEIGHT	DRUM	TORSION & DUPLEX SPRINGS		TRIPLEX SPRINGS	
			HEADROOM (HIGH LIFT + BELOW)	FLOOR TO SHAFT CENTER	HEADROOM	FLOOR TO SHAFT CENTER
2"	UP TO 54"	D5250-54	9-3/4"	DH + HL + 5"	10-1/4"	DH + HL + 7"
	UP TO 120"	D5750-120	12-1/2"	DH + HL + 7"	13"	DH + HL + 7"
	UP TO 120"	D800-120	13-1/2"	DH + HL + 7"	15"	DH + HL + 7"
	UP TO 164"	D6375-164	13-1/4"	DH + HL + 7"	14-3/4"	DH + HL + 7"

DH = DOOR HEIGHT * ADD 4" FOR OPERATOR.
HL = HIGH LIFT

COMMERCIAL ANGLE MOUNT HIGH LIFT BREAKAWAY

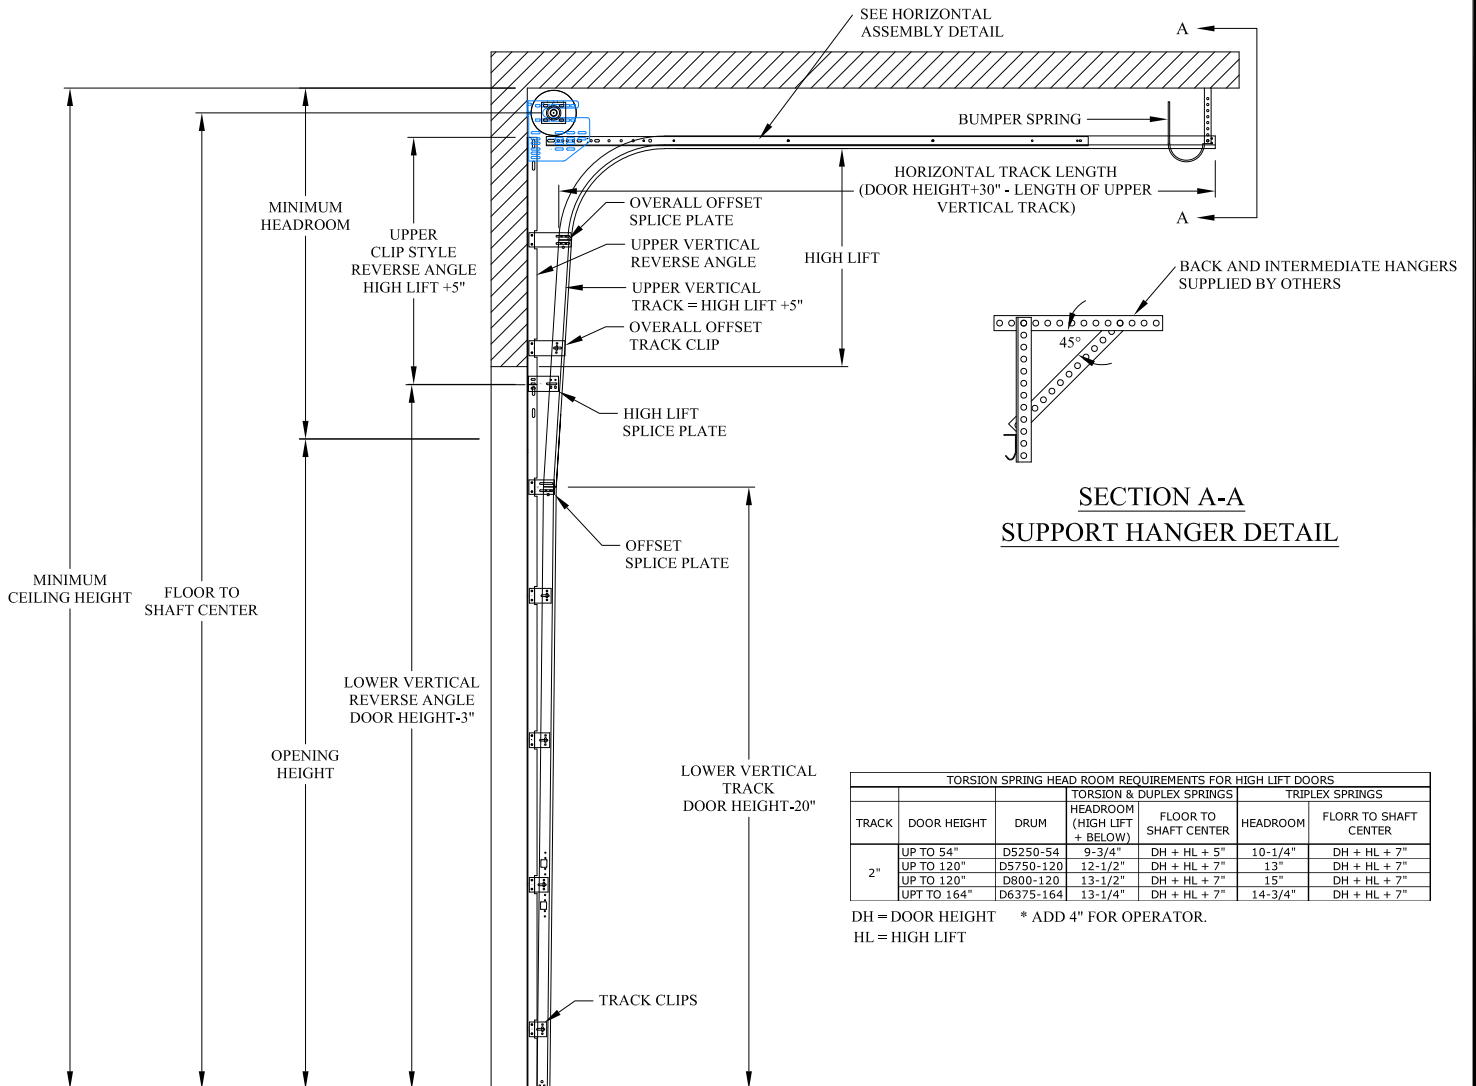

TORSION SPRING HEAD ROOM REQUIREMENTS FOR HIGH LIFT DOORS						
TRACK	DOOR HEIGHT	DRUM	TORSION & DUPLEX SPRINGS		TRIPLEX SPRINGS	
			HEADROOM (HIGH LIFT + BELOW)	FLOOR TO SHAFT CENTER	HEADROOM	FLOOR TO SHAFT CENTER
2"	UP TO 54"	D5250-54	9-3/4"	DH + HL + 5"	10-1/4"	DH + HL + 7"
	UP TO 120"	D5750-120	12-1/2"	DH + HL + 7"	13"	DH + HL + 7"
	UP TO 120"	D800-120	13-1/2"	DH + HL + 7"	15"	DH + HL + 7"
	UP TO 164"	D6375-164	13-1/4"	DH + HL + 7"	14-3/4"	DH + HL + 7"

DH = DOOR HEIGHT * ADD 4" FOR OPERATOR.
HL = HIGH LIFT

HIGH LIFT BREAKAWAY ANGLE MOUNT TRACK SET DETAIL